

# Technical Data Sheet


## 1-Ear Clamp with mechanical interlock

### Product Group 105 & 155

---



Connecting Technology

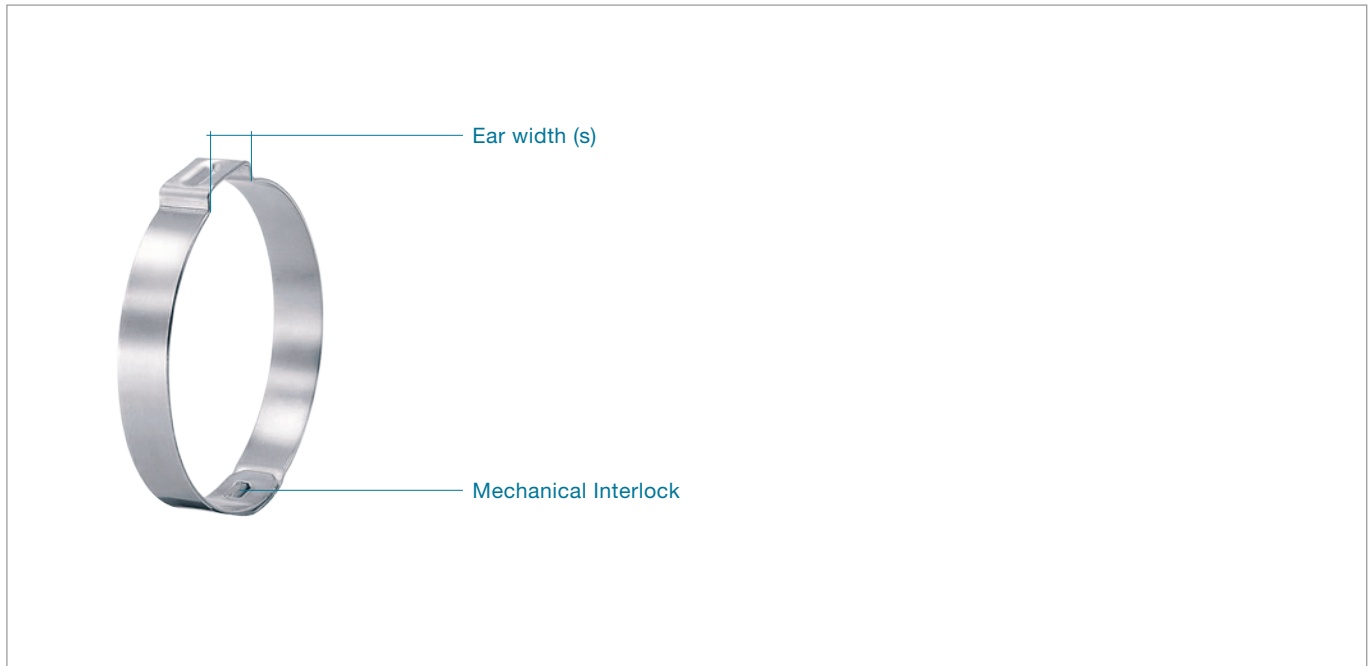

Clamp ear: fast and simple installation, visible deformation provides evidence of proper closure

Dimple: increases clamping force

Burr-free strip edges: reduced risk of damage to parts being clamped

## 1-Ear Clamp with mechanical interlock Product Group 105 & 155

### Material

PG 105 Galvanized or zinc-plated steel band

PG 155 Stainless Steel, Material no. 1.4301/UNS S30400

### Corrosion resistance according to DIN EN ISO 9227

PG 105  $\geq$  144 h

PG 155  $\geq$  1000 h

### Series

Size range	width x thickness
10.5 – 116.0 mm	7.0 x 0.6/0.8 mm

Some sizes are only available if an appropriate minimum quantity is ordered.

PG 105 only available on request.

Using tools designed or endorsed by Oetiker, the clamp is closed by drawing together the lower radii of the “ear”. The maximum diameter reduction is proportional to the open “ear” width. The theoretical maximum reduction in diameter is given by the formula:

$$\text{Max. diameter reduction} = \frac{\text{Ear width (s)}}{\pi}$$

To ensure perfect sealing, clamp ears must be correctly closed during installation.

### Clamp diameter

The following applies as a guideline: To determine the correct clamp diameter, push the hose onto the attaching material, (e.g. the nipple), and then measure the outer diameter of the hose. The value of the outer diameter must be slightly above the average value of the diameter range of the clamp to be selected.

### Mechanical interlock

The mechanical interlock is a mechanical connection which keeps the clamp securely closed. By using a mechanical interlock instead of spot-welding, corrosion around the closure elements is reduced.

**Assembly recommendations**

The clamp ear should be closed with a constant tool jaw force, this practice is referred to as “force priority closure”. This assembly method ensures that a uniform and repeatable stress is applied to the application with a constant tensile force on the mechanical interlock.

Employing this methodology when closing 105 & 155 series clamps will compensate for any component tolerance variations, and ensure that the clamp applies a constant radial force to the application. Fluctuations in component tolerances are absorbed by variations in the “ear” gap (the space between the lower radii after installation).

**Closing force**

It is important to realize that there is in a very close relationship between the desired compression of the material being clamped and the closing force selected. The table below gives maximum closing forces in relation to the size of the part being clamped.

**Important**

Single tool stroke closure only, do not apply secondary crimping force.

**Installation data**

Size (mm)	Closing force max. (N)	Installation tools force-monitored <sup>1</sup> :		
		Manual	Pneumatic	Cordless
10.5 – 17.0	1200	HMK 01/S01	HO ME 2000	CP 01
18.5 – 116.0	2000	HMK 01/S01	HO ME 2000	CP 01

For an alternative option, see our manual pincers on page 104

<sup>1</sup> Further information on page 84

**Important note**

These figures are intended as a guide, they may vary depending on the type and tolerances of parts being clamped. To ensure optimum clamp selection, we recommend making functional tests with several assemblies.

## Order information

Item No.	Ref. No.	Ear width inside (mm)	Size range (mm)	Item No.	Ref. No.	Ear width inside (mm)	Size range (mm)
1-Ear Clamp with mechanical Interlock, stainless Band width 7.0 mm, thickness 0.6 mm				1-Ear Clamp with mechanical Interlock, stainless Band width 7.0 mm, thickness 0.6 mm			
15500000	0105.0R	5	8.9 – 10.5	15500026	0410.0R	10	37.9 – 41
15500001	0113.0R	5	9.7 – 11.3	15500027	0425.0R	10	39.4 – 42.5
15500002	0123.0R	6	10.4 – 12.3	15500028	0440.0R	10	40.9 – 44
15500003	0133.0R	6	11.4 – 13.3	15500029	0455.0R	10	42.4 – 45.5
15500004	0135.0R	6.5	11.5 – 13.5	15500030	0470.0R	10	43.9 – 47
15500005	0138.0R	6	11.9 – 13.8	15500031	0485.0R	10	45.4 – 48.5
15500006	0140.0R	6.5	11.9 – 14	15500032	0500.0R	10	46.9 – 50
15500007	0145.0R	6	12.6 – 14.5	15500033	0515.0R	10	48.4 – 51.5
15500008	0157.0R	7	13.5 – 15.7	15500034	0530.0R	10	49.9 – 53
15500009	0170.0R	6	15.1 – 17	15500035	0545.0R	10	51.4 – 54.5
15500010	0185.0R	9	15.7 – 18.5	15500036	0560.0R	10	52.9 – 56
15500011	0198.0R	9	17 – 19.8	15500037	0575.0R	10	54.4 – 57.5
15500012	0210.0R	9	18.2 – 21	15500038	0590.0R	10	55.9 – 59
15500013	0226.0R	9	19.8 – 22.6	15500039	0605.0R	10	57.4 – 60.5
15500014	0241.0R	9	21.3 – 24.1	15500040	0620.0R	10	58.9 – 62
15500015	0256.0R	9	22.8 – 25.6	15500041	0635.0R	10	60.4 – 63.5
15500016	0271.0R	10	24 – 27.1	15500042	0650.0R	10	61.9 – 65
15500017	0286.0R	10	25.5 – 28.6	15500043	0665.0R	10	63.4 – 66.5
15500018	0301.0R	10	27 – 30.1	15500044	0680.0R	10	64.9 – 68
15500019	0316.0R	10	28.5 – 31.6	15500045	0695.0R	10	66.4 – 69.5
15500020	0331.0R	10	30 – 33.1	15500046	0710.0R	10	67.9 – 71
15500021	0346.0R	10	31.5 – 34.6	15500047	0725.0R	10	69.4 – 72.5
15500022	0361.0R	10	33 – 36.1	15500048	0740.0R	10	70.9 – 74
15500023	0376.0R	10	34.5 – 37.6	15500049	0755.0R	10	72.4 – 75.5
15500024	0381.0R	10	35 – 38.1	15500050	0770.0R	10	73.9 – 77
15500025	0396.0R	10	36.5 – 39.6	15500051	0785.0R	10	75.4 – 78.5

## Order information

Item No.	Ref. No.	Ear width inside (mm)	Size range (mm)
----------	----------	--------------------------	-----------------

1-Ear Clamp with mechanical Interlock, stainless  
Band width 7.0 mm, thickness 0.6 mm

15500052	0800.0R	10	76.9 – 80
15500053	0815.0R	10	78.4 – 81.5
15500054	0830.0R	10	79.9 – 83
15500055	0845.0R	10	81.4 – 84.5
15500056	0860.0R	10	82.9 – 86
15500057	0875.0R	10	84.4 – 87.5
15500058	0890.0R	10	85.9 – 89
15500059	0905.0R	10	87.4 – 90.5
15500060	0920.0R	10	88.9 – 92
15500061	0935.0R	10	90.4 – 93.5
15500062	0950.0R	10	91.9 – 95
15500063	0965.0R	10	93.4 – 96.5
15500064	0980.0R	10	94.9 – 98
15500065	0995.0R	10	96.4 – 99.5
15500066	1010.0R	10	97.9 – 101
15500067	1025.0R	10	99.4 – 102.5
15500101	1040.0R	10	100.9 – 104
15500068	1055.0R	10	102.4 – 105.5
15500102	1070.0R	10	103.9 – 107
15500103	1085.0R	10	105.4 – 108.5
15500104	1100.0R	10	106.9 – 110
15500105	1115.0R	10	108.4 – 111.5
15500106	1130.0R	10	109.9 – 113
15500107	1145.0R	10	111.4 – 114.5
15500069	1160.0R	10	112.9 – 116

# The Oetiker Group: [www.oetiker.com](http://www.oetiker.com)

**Headquarters Switzerland**  
Hans Oetiker AG  
Maschinen- und Apparatefabrik  
Oberdorfstrasse 21  
CH-8810 Horgen (Zürich)  
T +41 44 728 55 55  
F +41 44 728 55 15  
[info@ch.oetiker.com](mailto:info@ch.oetiker.com)

**Austria**  
Hans Oetiker  
Maschinen- und Apparatebau  
Ges.m.b.H.  
Eduard-Klinger-Strasse 19  
A-3423 St. Andrä-Wördern  
T +43 2242 33 994-0  
F +43 2242 33 997  
[info@at.oetiker.com](mailto:info@at.oetiker.com)

**Canada**  
Oetiker Limited  
203 Dufferin Street South  
P. O. Box 5500  
Alliston, Ontario L9R 1W7  
T +1 705 435 4394  
[info@ca.oetiker.com](mailto:info@ca.oetiker.com)

**P. R. China**  
Oetiker Industries (Tianjin) Ltd.  
10 Shuangchenzhong Road  
Beichen High Tech Industrial Park  
Tianjin 300400  
T +86 22 2697 1183  
F +86 22 2697 1380  
[info@cn.oetiker.com](mailto:info@cn.oetiker.com)

**Czech Republic**  
Hans Oetiker spol. s r. o.  
Videňská 116  
CZ-37833 Nová Bystřice  
T +420 384 386513  
F +420 384 386386  
[info@cz.oetiker.com](mailto:info@cz.oetiker.com)

**France**  
Oetiker Sarl  
Parc d'activités du Bel Air  
1, rue Charles Cordier  
77164 Ferrières-en-Brie  
T +33 1 79 74 10 90  
F +33 1 79 74 10 91  
[info@fr.oetiker.com](mailto:info@fr.oetiker.com)

**Germany**  
Hans Oetiker  
Metallwaren- & Apparatefabrik GmbH  
Üsenbergerstrasse 13  
D-79346 Edingen a. K.  
T +49 76 42 6 84-0  
F +49 76 42 6 84-125  
[info@de.oetiker.com](mailto:info@de.oetiker.com)

**Kurt Allert GmbH & Co. KG**  
Postfach 1160  
Austrasse 36  
D-78727 Oberndorf a. N.  
T +49 74 23 87 70-0  
F +49 7 4 23 87 70-87  
[info@allert.oetiker.com](mailto:info@allert.oetiker.com)

**Hong Kong**  
Oetiker Far East Limited  
2210 Tuen Mun Central Square  
22 Hoi Wing Road  
Tuen Mun NT  
T +852 2459 8211  
F +852 2459 8322  
[info@hk.oetiker.com](mailto:info@hk.oetiker.com)

**Hungary**  
Oetiker Hungaria KFT  
Vasvári P. U. 11  
H-9800 Vasvár  
T +36 94 370 630  
F +36 94 370 533  
[info@hu.oetiker.com](mailto:info@hu.oetiker.com)

**India**  
Oetiker India Private Ltd.  
N-14, Additional Patalganga  
Industrial Area  
Village Chavane, Khalapur  
Rasayani 410 220  
Dist. Raigad, Maharastra  
T +91 2192 250107-12  
F +91 2192 250105  
[info@in.oetiker.com](mailto:info@in.oetiker.com)

**Japan**  
Oetiker Japan Co. Ltd.  
Kaneko Bldg. A  
5-3-5 Nakamachi-dai, Tsuzuki-ku  
Yokohama 224-0041  
T +81 45 949 3151  
F +81 45 949 3152  
[info@jp.oetiker.com](mailto:info@jp.oetiker.com)

**Netherlands**  
Oetiker Benelux B. V.  
Hertzstraat 38  
NL-6716 BT Ede  
T +31 318 63 71 71  
F +31 318 63 34 89  
[info@nl.oetiker.com](mailto:info@nl.oetiker.com)

**Spain**  
Oetiker España, S. A.  
Pol. Ind. Las Salinas  
C/Puente, 18  
E-11500 El Puerto  
de Santa María (Cádiz)  
T +34 956 86 04 40  
F +34 956 87 17 07  
[info@es.oetiker.com](mailto:info@es.oetiker.com)

**South Korea**  
Oetiker Far East Limited  
Korea Liaison Office  
Postal Zip Code 135-880  
1401 LG Twintel 1-Cha 157-8  
Samseong 1-dong  
Gangnam-gu, Seoul  
T +82 2 2191 6100  
F +82 2 2191 6109  
[info@kr.oetiker.com](mailto:info@kr.oetiker.com)

**United Kingdom**  
Oetiker UK Limited  
Foundry Close  
GB-Horsham, Sussex RH13 5TX  
T +44 1403 26 04 78  
F +44 1403 24 06 90  
[info@uk.oetiker.com](mailto:info@uk.oetiker.com)

**USA**  
Oetiker, Inc.  
6317 Euclid Street  
Marlette, Michigan 48453-0217  
T +1 989 635 3621  
800 959 0398 (toll-free)  
F +1 989 635 2157  
[info@us.oetiker.com](mailto:info@us.oetiker.com)